


If the gap between the cement backer boards is greater than 1/4 inch, you can use polyurethane sealant to fill the gap. Make sure to wipe the sealant to make it as flush with the backer board as possible.

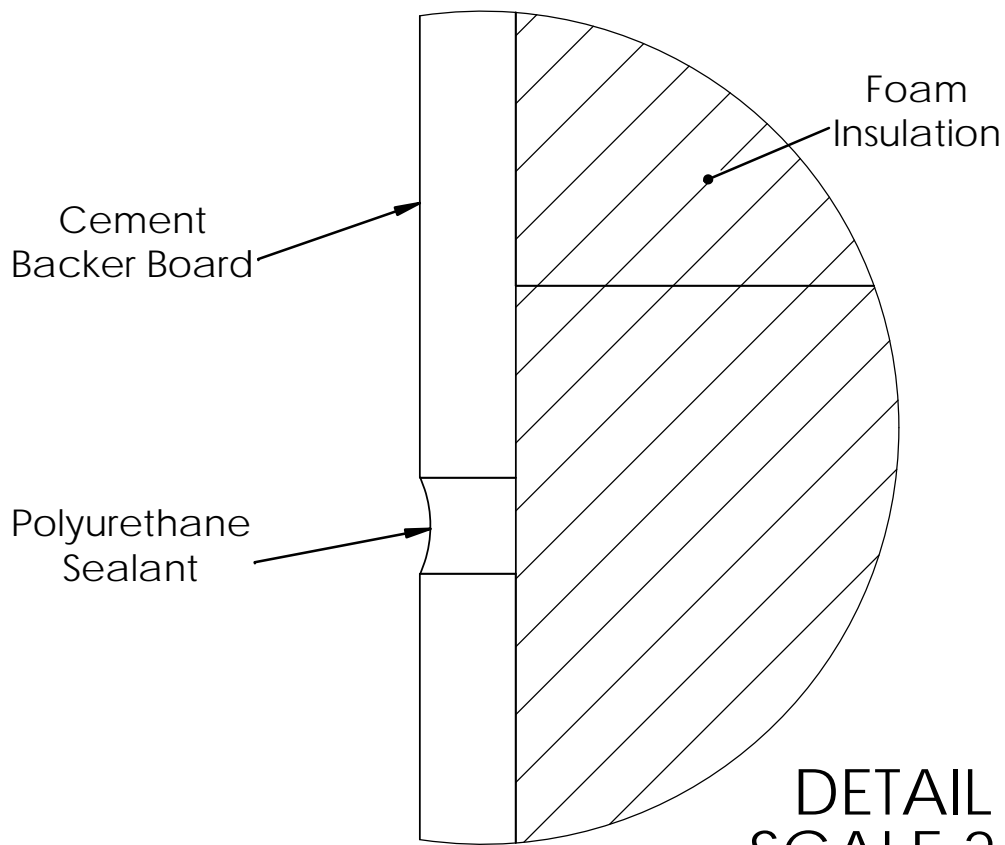

S

DETAIL S
SCALE 2 : 1

