


If the gap between the cement backer boards is greater than 1/4 inch, you can use Water Armor TG in conjunction with Water Armor Flashing Tape. Fill the gap with Water Guard TG and apply a skim coat about 1/16" thick and immediately center and embed Water Armor Flash Tape into wet skim coat.

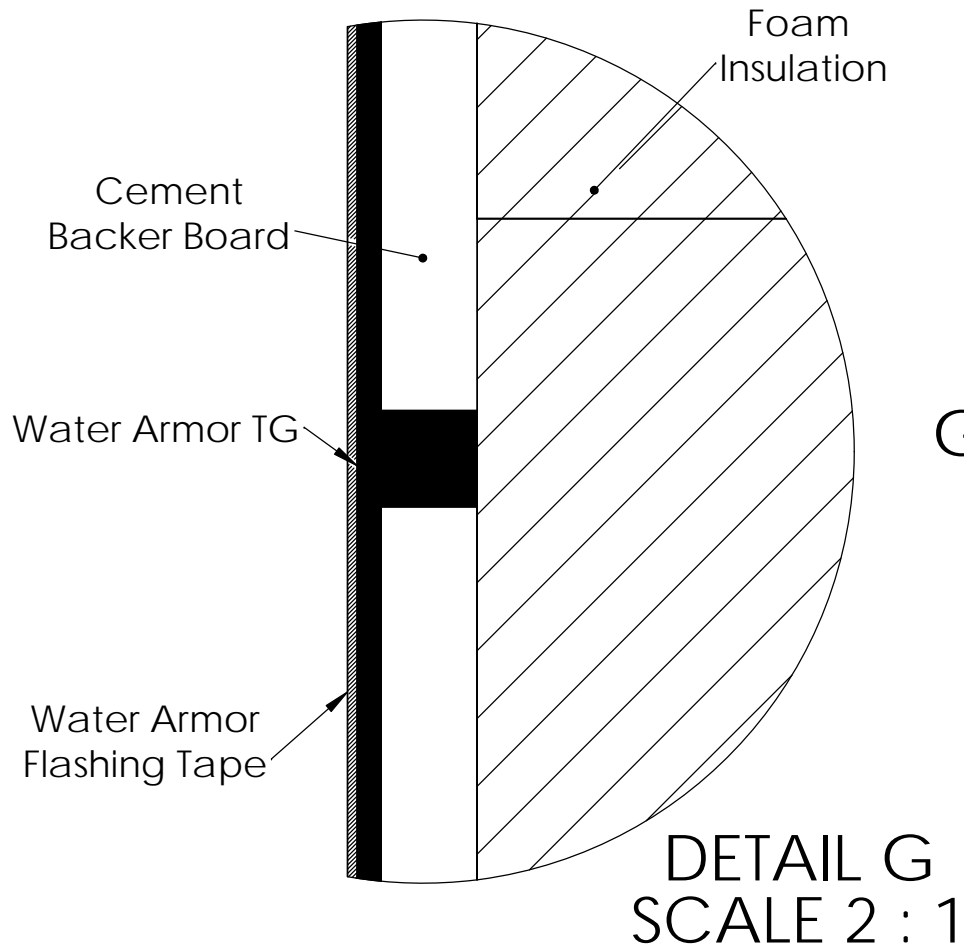

G

